Installation – Commissioning – Maintenance

20200511

Installation in general

The figures below show examples of installation on a ceiling, wall and flush mounted in a wall. The product delivery does not include any installation accessories (angle bar, drop rods, screws, etc.).

Installation ceiling

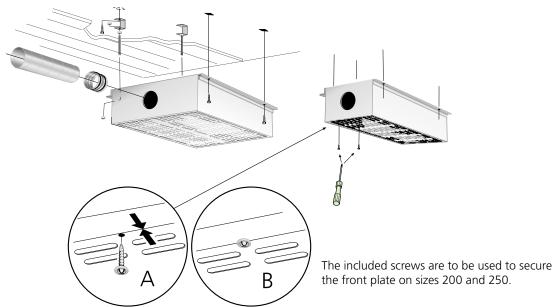


Figure 1. Installation ceiling.

Installation wall

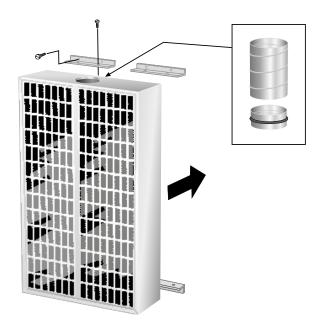


Figure 2. Installation wall.

Recessed installation

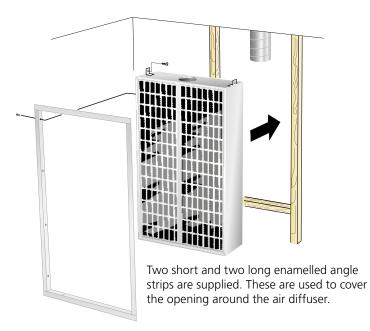


Figure 3. Recessed installation.



Commissioning

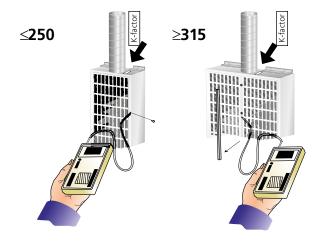


Figure 4. Commissioning.

Maintenance for ≤250



Figure 6. Maintenance for one-piece front with A=590 mm and circular connection 200 and 250, lift and pull out.

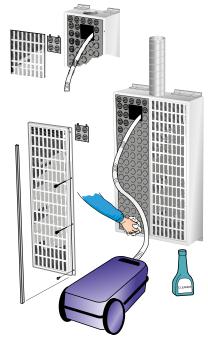


Figure 9. Maintenance.

Disc settings – Varizon®

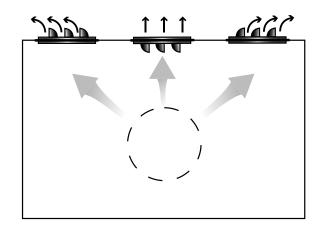


Figure 5. Disc settings.

Maintenance for ≥315

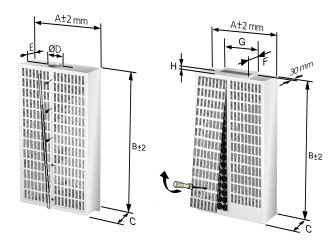


Figure 7. Maintenance for two-piece front with A=1190 mm and circular connection, dismantle the cover strip and then the screws that secure the front plate, lift and pull out.

Figure 8. Maintenance for two-piece front with A=1190 mm and rectangular connection, dismantle the cover strip and then the screws that secure the front plate, lift and pull out.

Dimensions, weight and K-factor

Size	Dimensions (mm)							Weight	K-factor**)
DRI	Α	В	С	$\emptyset D^{*)}$	Е	FxG	Н	(kg)	Supply air
200	590	1190	300	200	115	-	0	23	32,0
250	590	1990	350	250	140	-	0	41	53,0
315	1190	1990	415	315	173	-	0	78	85,0
400	1190	1990	500	400	215	-	0	81	130,0
200-600	1190	1990	300	-	-	200 x 600	55	73	120,0
250-800	1190	1990	350		-	250 x 800	75	75	176,0

^{*)} DRI with circular duct connection has a spigot for connecting a duct joint.



^{**)} Number of measuring tubes: 1.